


1. Diagnostic operation

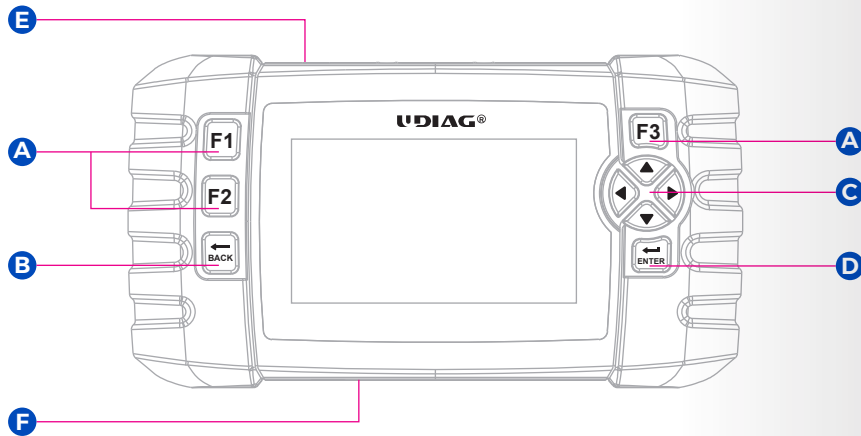

A Function Keys/ Shortcut Keys (F1/ F2/ F3)

Three keys that correspond with "buttons" on some screens for executing commands or provide quick access to most frequently used applications.

B Back Key

Return to previous interface or exit.

C Selection Keys

To select an option or scroll through a screen of data or text.

D Enter Key

To confirm the current operation.

E DC Power Input Jack

Provides power to the scan tool from the car's cigar lighter when the DLC port cannot power up the scan tool on some cars.

F TF Card Port

Holds the TF memory card for data backup and software update.

2. Before start diagnosis, please make sure

1



The ignition switch is turned to ON position

2



Engine is off


3



10 to 14 volt vehicle power



Never try to provide power for the code reader from USB connection when the code reader is communicating with a vehicle.

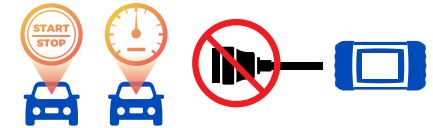

Don't connect or disconnect the equipment while the ignition is on or the engine is running.

3. Powering up the scanner

Before using the code reader, make sure to provide power to the code reader. The unit operates on any of the following sources:


3.1. 12-volt vehicle power

a



Turn the ignition off.

b

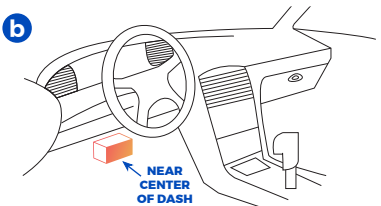

Locate the data link connector (DLC) under the dash on the driver side of the vehicle.

c



Switch the ignition key to the ON position.

d




The code reader automatically boots up.

4. Update

Before updating, please make sure your network works correctly and download the UDIAG updater from our website: www.udiatech.com

- 4.1. Remove TF card from scan tool, insert it to computer via card reader.
- 4.2. Click the desktop icon to launch updater and click register.
- 4.3. Fill out necessary information and click register.
- 4.4. Double click the updater icon on the desktop to login with UDIAG ID and password.
- 4.5. Select the available software to update.

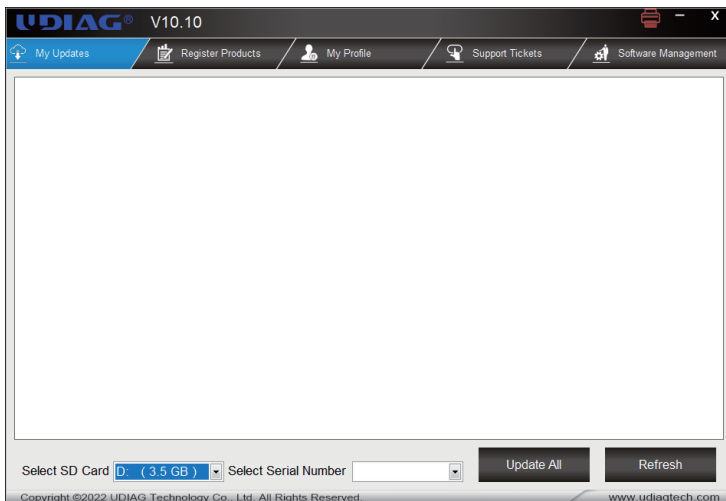

5. Print test results

The Print Data function is used to print test results through computer.

- 5.1. Remove TF card from scan tool, insert it to computer via card reader.
- 5.2. Launch the updater.
- 5.3. Choose the file you want to print and click print button.
- 5.4. Click at print icon directly at the right corner. 

6. Service and support

Website: www.udiatech.com

Email: support@udiatech.com

Please refer to the User Manual in updater or our website for more operational details.

7. Warranty and service

Limited One Year Warranty

The warranty is 1 year for hardware, which does not cover damage caused by human factors, accidents, misuse of the product. Under the warranty, customers can ask for replacement due to non-human damage.