




1. Diagnostic operation

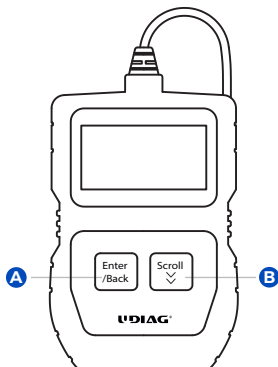

This section illustrates external features, ports and connectors of the code reader.

A Enter/Back Key

Return to the previous interface or exits.
Confirm the current operation.

B Scroll Key

To select an option or scroll through a screen of data or text.

2. Service and support

Website: www.udiatech.com

Email: service@udiatech.com

Please refer to the User Manual on our website for more operational details.

3. Before start diagnosis, please make sure

1



The ignition switch is turned to ON position

2



Engine is off

3



10 to 14 volt vehicle power



Don't connect or disconnect the equipments while the ignition is on or the engine is running.

4. Powering up the scanner

Please follow below steps to turn on the scanner:

a



Turn the ignition off.

b



Find the data link connector (DLC) on vehicle, which is located under instrument cluster on the driver side.

c



Switch the ignition key to the ON position.

d



The scanner will power up automatically.

5. Warranty and service

Limited One Year Warranty

The warranty is 1 year for hardware, which does not cover damage caused by human factors, accidents, misuse of the product. Under the warranty, customers can ask for replacement due to non-human damage.